

LDP-7016D/24D Series User Guide (New Zealand)

LDP-7016D



LDP-7024D



About this User Guide:

This User guide is intended to familiarize a user with the LDP-7016D and 7024D Keyset. For a more detailed description of the Keysets capabilities, please refer to the System User Guide. (Available at www.lgaria.co.nz, through the Downloads section – User Guides)

Table of Contents

Getting Started	4
LDP-7000 Series Model 7016D & 7024D	4
Input / Output Devices and Button	5
Cable Connection	7
ADP (Additional Device Port)	8
Placing or answering a call	10
1. Placing a call	10
2. Answering a call	10
3 Soft Button & Navigation Button	11
Basic Function	12
1. Idle.....	12
1.1 Pickup.....	12
1.2 Conference	13
1.3 Redial	14
2. Off Hook.....	14
3. Intercom Dialing	14
4. Intercom Ring Back	15
5. Intercom Busy	15
6. Intercom Do Not Disturb	15
7. Intercom Dialing Error	15
8. Intercom Receiving	15
9. Intercom Talk	16
10. CO Line Busy.....	16
11. CO Dialing / CO Talk	16
12. Checking messages	17
13.Paging	17
Call Log	18
1. Received Call.....	18
2. Dialed Call	19
3. Lost Call.....	20
3.1 Answer	20
3.2 Del Cur (Delete Current)	20
3.3 Del All (Delete All)	21
3.4 Save.....	21
3.5 Name/Tel	21

Table of Contents

Menu	22
1. Basic Program	23
1.1 Station name program	23
1.2 Ring program	24
1.2.1 Select Ring	25
1.2.2 Select melody	25
1.3 Mode (H/T/P) Program	26
1.4 Password Program	27
1.4.1 Password Register	27
1.4.2 Password Change	28
1.5 Language Program	29
1.6 ENBLOCK Mode Program	29
2. Advanced Program	30
2.1 Wake up Program	30
2.1.1 Setting	30
2.1.2 Canceling	31
2.2 Pre-selected MSG PGM	32
2.2.1 Select the MSG PGM	32
2.2.2 Canceling/ Changing	33
2.3 Station COS Program	34
2.3.1 COS Down Mode	34
2.3.2 Restoring COS Mode	35
2.3.3 Walking COS Mode	36
2.4 SPK/Headset Program	37
2.5 EAR MIC Program	37
3. Speed Program	38
4. Mobile Extension PGM	39
4.1 Mobile-EXT. NUM PGM	39
4.2 Mobile-EXT Enable	39
5. Conference Room PGM	40
5.1 Create CONF Room	40
5.2 Delete CONF Room	40
6. Hot Desk Program	41
6.1 Hot Desk Log in	41
6.2 Hot Desk Log out	42
Phone Book	43
1. Dial By ICM Name	43
2. Dial By STA SPD name	44
3. Dial By SYS SPD Name	44
Entering characters	45
Glossary of Terms	46

Getting Started

LDP-7000 Series, Model 7016D & 7024D

LDP-7016D/7024D are advanced, user-friendly digital keysets, offering the convenience of 3 soft buttons and a navigation key.

- Features
 - Trendy and Stylish LDP Family design
 - Multi Level 3 Line LCD (3 x 24)
 - 16 or 24 Flexible buttons with dual-color LED's
 - Additional Device Port (ADP) for SLT or FAX
 - Call Log Feature
 - Call Recording Feature – 7024D only (Optional USB Module).
 - Hands-Free Solution – 7024D only (Optional Blue-Tooth Module).
 - Wall Mountable (Bracket Optional)

LDP-7016D




LDP-7024D



Getting Started


Input / Output Devices and Buttons

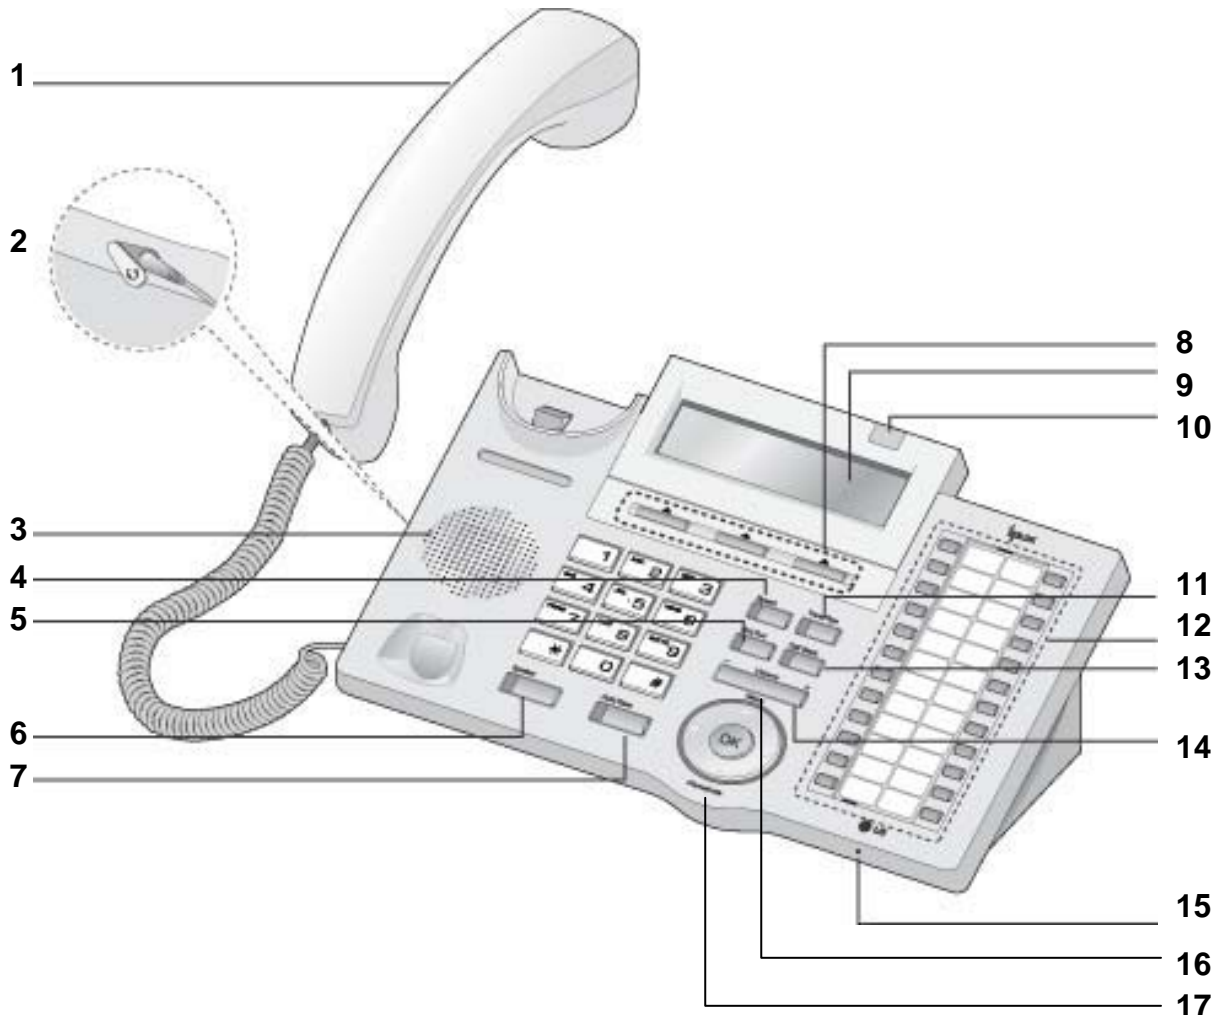

1	Handset	10	Message Waiting LED
2	Earphone-Jack Socket (Ear/Mic Mode)	11	Trans/Pgm Button
3	Speaker	12	Flexible Button (Loop Button)
4	Speed Button	13	Call back Button
5	Dnd/Fwd Button	14	Volume Button
6	Speaker Button	15	Hands-free Microphone
7	Hold/Save Button	16	Menu Button
8	3 Soft Button	17	Phonebook Button (Same operation as 'Speed')
9	LCD Display		

Getting Started

Cable Connection

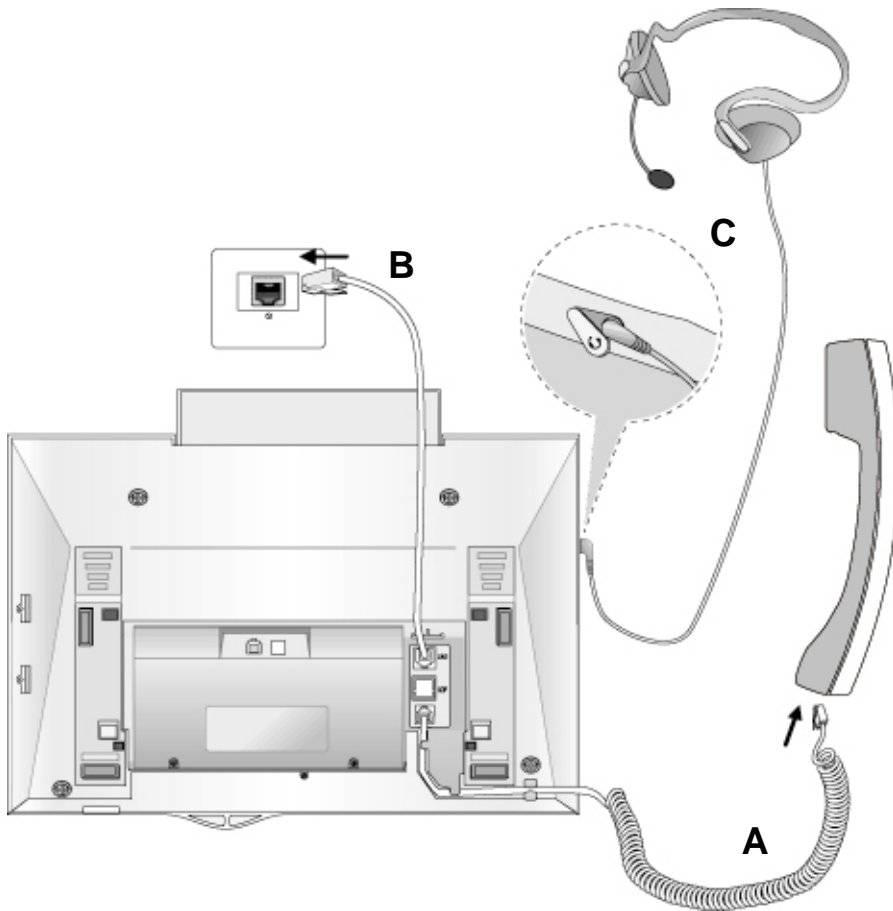


Cable connections

- A** - Connect the telephone cord (curly cord) to the handset and the other end to the handset jack on the bottom of the telephone.
- B** - Connect the line cable to the port on the bottom of the telephone and the other end to the wall socket.
- C** - Connect the Headphone to the headphone jack on the left side of the telephone. (As viewed from the front.)


Getting Started

ADP (Additional Device Port)

■ SLT Connection through ADP

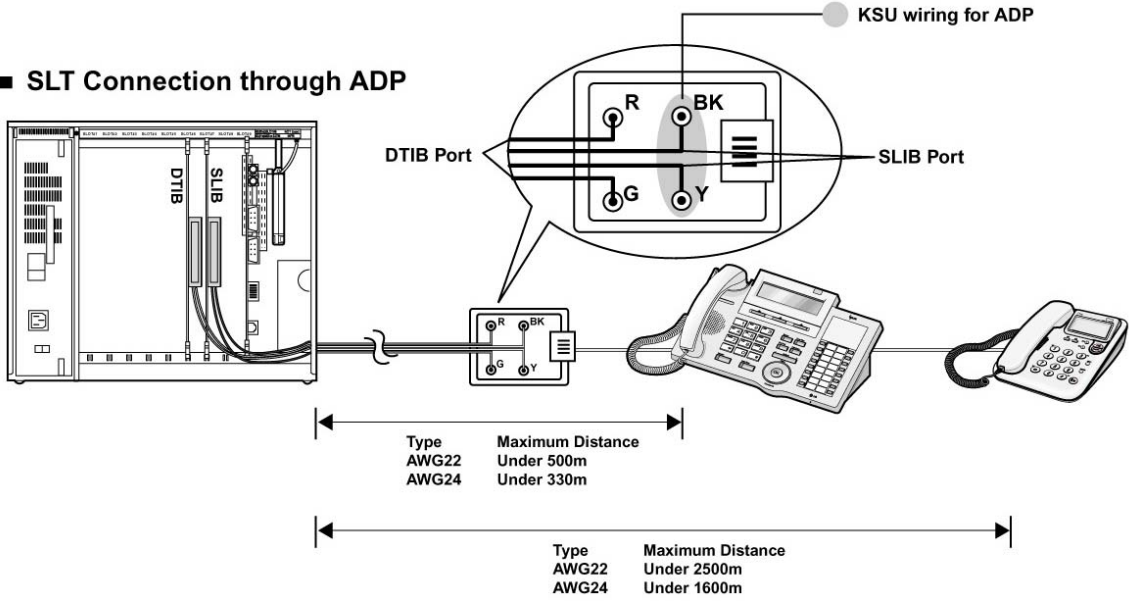


■ KTU Connection through ADP

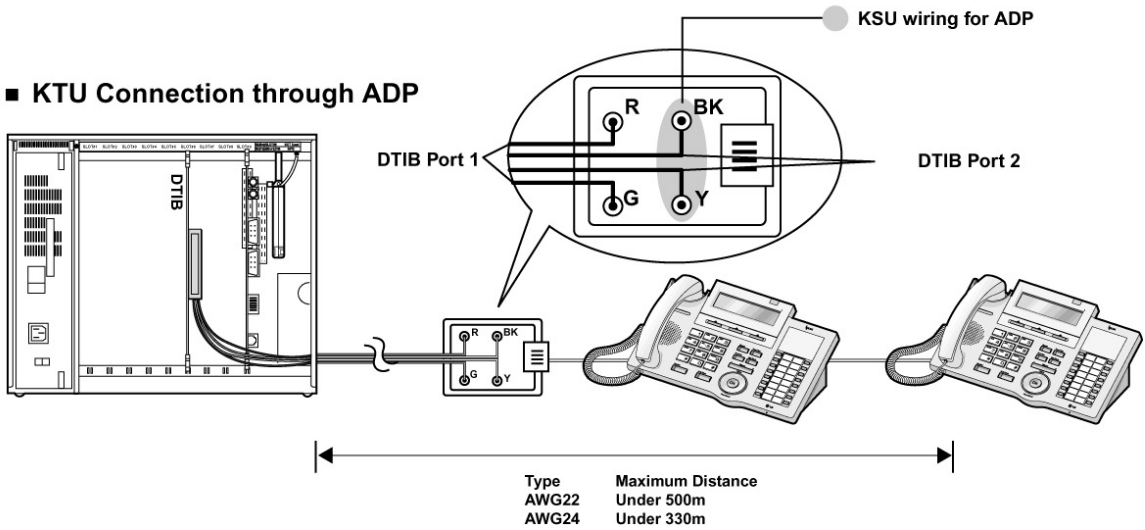

Getting Started

ADP (Additional Device Port)

ADP (Additional Device Port)

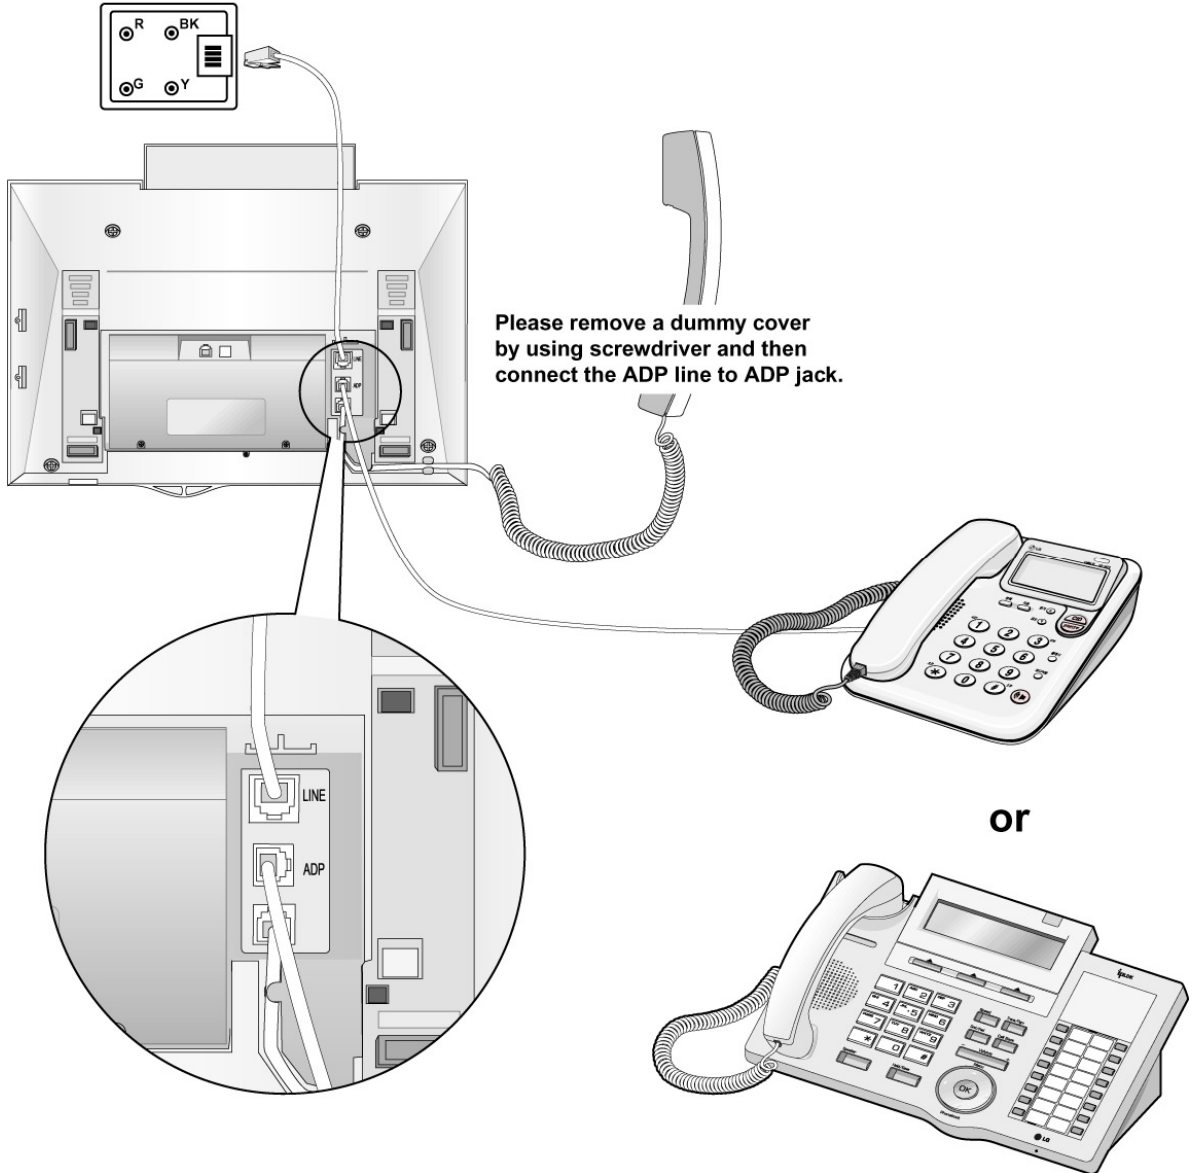

Placing and Answering a Call

1. Placing a Call

ICM Line




Lift handset

or



Enter the extension number

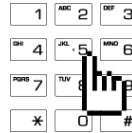

talk

CO Line



Lift handset

or



Dial 1 or select CO line flexible button.

Enter the desired phone number



talk

2. Answering an Outside Call

ICM Line



Lift handset

or



talk

CO Line



Lift handset

or




Press flashing CO line button or loop key.

talk

3 Soft Buttons & Navigation Button


3 Soft Button

The 3 Soft Buttons are located beneath the LCD display. The function of each button changes, subject to call status and progress. The current functions are displayed on the LCD screen, directly above each button. For example, if the user calls a busy extension, busy tone will be heard and the busy status displayed. The LCD screen will display the busy message along with the different options available - "Message Wait", "Camp-On" and "Flash". By pressing the relevant button the desired feature is activated.

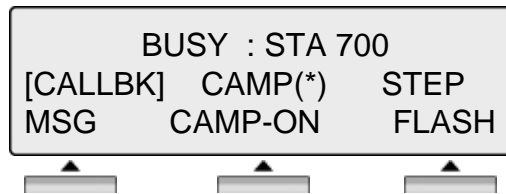

Navigation Button

In some instances, more than 3 current functions are available to the user, and this is indicated by the appearance of a left (←) or right (→) arrow in the LCD screen, (see below). By pressing the navigation key (located below the volume button), in the direction corresponding to the arrow, any additional functions will be displayed.

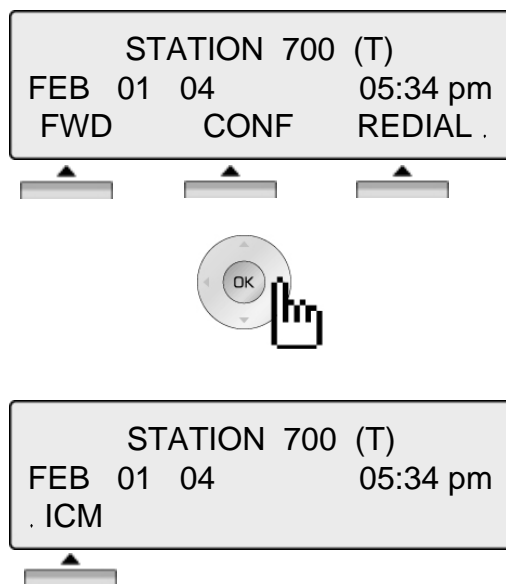


Basic Function

By pressing one of the 3 soft buttons you are able to select the indicated function. For instance, if you want to select call pickup (as shown below), press the first button on the left. If there are more than three functions available at any point, an arrow will be displayed on the LCD display. Use the navigation key to move the next or previous screen to display additional functions.

1. Idle

3 Soft Buttons are located below the LCD display.

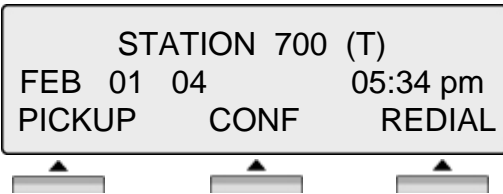

PICKUP : press to pickup a call ringing within the same pickup group.


CONF : press to initiate & activate a conference.

REDIAL : press to redial last number called.


1.1 Pickup

A station can pickup a call ringing to an unattended station within the same pickup group by using the pickup procedure.

. Refer to IP LDK system & LDK system programming manual.

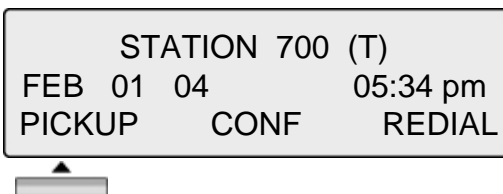

Press [PICKUP] button.

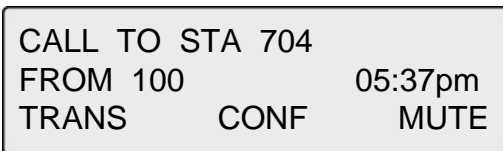

Talk

Basic Function

1.2 Conference

CALL TO STA 700
FEB 01 04 05:34 pm
MSG FLASH

Dial the desired station number.
(e.g.700)
Station 700 answers the call.

CALL TO STA 700
FEB 01 04 05:34 pm
TRANS CONF MUTE

Press [CONF] button.



CONFERENCE
FEB 01 04 05:34 pm
FWD CONF REDIAL .

Dial the phone number of the next desired station.
(e.g.704)

CALL TO STA 704
FEB 01 04 05:34pm
MSG FLASH

Station 704 answers the call.

CALL TO STA 704
FEB 01 04 05:34 pm
TRANS CONF MUTE

Press the [CONF] button twice.



CONFERENCE
FEB 01 04 05:34 pm
CONF MUTE

A 3-party conference is now established.

Basic Function

1.3 Redial

STATION 700 (T)
FEB 01 04 05:34 pm
PICKUP CONF REDIAL

Press the [REDIAL] button.

.123456789
BACK NEXT SEND

Press [SEND] button to call.

123456789
LINE 008 00:00:10
TRANS CONF MUTE .

Talk

2. Off Hook

STATION 700 (T)
FEB 01 04 05:34 pm
FWD CONF REDIAL.

FWD : Press the [FWD] button to forward calls to another station, Voicemail etc.
CONF : Press the [CONF] button to initiate a conference call.
REDIAL : Press the [REDIAL] button to call last number dialed.

STATION 700 (T)
FEB 01 04 05:34 pm
. ICM

ICM : If, while on a call, ICM call is received, press the [ICM] button to place 1st call on hold and answer 2nd call.

3. Intercom Dialing

STATION 700 (T)
FEB 01 04 05:34 pm
FLASH

FLASH : If you wish to terminate an ICM call and make another call, press [FLASH] to re-seize dial tone.

Basic Function

4. Intercom Ring Back

CALL TO STA 700
FEB 01 04 05:34 pm
MSG FLASH

MSG : Press to leave a your station number or message.
FLASH : Press to disconnect the line and re-seize.

5. Intercom Busy

BUSY : STA 700
[CALLBK] CAMP (*) STEP
MSG CAMP-ON FLASH

MSG : Press to leave your station number or message.
CAMP-ON : Press to send a call waiting tone to a busy station (indicating that they have a call waiting).
FLASH : Press to disconnect the line and re-seize.

6. Intercom Do Not Disturb

DO NOT DISTURB STA 700
CALLBK FLASH

CALLBK : Press leave a call back request or message.
FLASH : Press to disconnect the line and re-seize.

7. Intercom Dialling Error

INVALID
FEB 01 04 05:34 pm
FLASH

FLASH : Press to disconnect the line and re-seize.

8. Intercom Receiving


CALL FROM STA 704
FEB 01 04 05:34 pm
DND

DND : Press to block all incoming calls. (Do Not Disturb)

Basic Function

9. Intercom Talk


CALL FROM STA 704
FEB 01 04 05:34 pm
TRANS CONF MUTE



TRANS : Press to transfer an incoming call to another station.
CONF : Press to initiate a conference call.
MUTE : Press to mute the handset, speakerphone, or headset microphone. Press the [SPEAK] button to re- activate microphone.

10. CO Line Busy


CO LINE 001 BUSY
QUEUING ([CALLBK])
CALLBK



CALLBK : If, after dialing '1' for a CO line, busy tone indicates no lines are available, press [CALLBK] to reserve a CO line.

11. CO Dialling/CO Talk


123456789
LINE 125 00:00:03
TRANS CONF MUTE .



TRANS : Press to transfer an incoming call to another station.
CONF : Press to initiate a conference call.
MUTE : Press to mute the handset, speakerphone, or headset microphone. Press the [SPEAK] button to re- activate microphone.



123456789
LINE 125 00:00:03
. RECORD FLASH ACNR



RECORD : Press to record the current conversation. (if fitted)
FLASH : Press to disconnect the line and re-seize.
ACNR : Press to set automatic called number redial.

Basic Function

12. Checking messages

VMIB MSG FROM EXTERNAL
NEXT REPEAT DELETE .



NEXT : Press to move to the next message.
REPEAT : Press to repeat the current message.
DELETE : Press to erase the current message.

VMIB MSG FROM EXTERNAL
. ADD REWIND CALLBK



ADD : Press to tag the current message with your comment before forwarding. Record your comments & then dial the required station number to complete the transfer.
REWIND : Press momentarily to repeat part of current message.
CALLBK : Press to leave a call back request.

13. Paging

PAGE FROM STA 703
20 AUG 04 11:51am
MEET ME



MEET ME : Press to answer a paging request.

Call Log

Call Log Button PGM : Trans/Pgm + Flexible button + Trans/Pgm '57'

Press the [Call Log] button.




RECEIVED CALL : Received call list *
DIALED CALL : Dialed call list




LOST CALL : Missed call list*

* CLI (Calling Line ID) mandatory.

1. Received Call

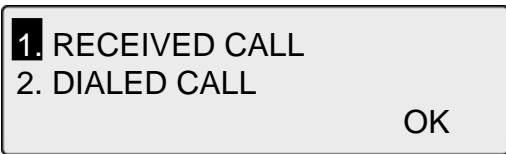

Press [OK] or  button.

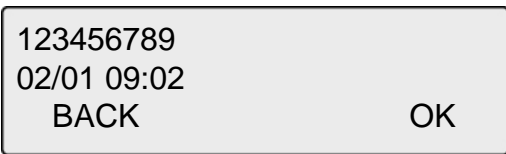

Press [OK] or  button.



NOTE


BACK Return to the previous


Call Log

2. Dialed Call

1. RECEIVED CALL
2. DIALED CALL



OK




Press [OK] or  button.




123456789
02/01 09:02
BACK

OK



Press [OK] or  button.

123456789
LINE 125 00:00:03
TRANS CONF MUTE .




NOTE

BACK Return to the previous

Call Log

3. Lost Call

3 LOST CALL
OK

Press [OK] or  button.

0123456789
03/10 16:02 CNT :01
BACK SELECT> ANSWER

Press the [SELECT] button to select the following functions: ANSWER, DEL CUR (delete current), DEL ALL (delete all), SAVE, NAME/TEL

3.1 ANSWER

0123456789
03/10 16:02 CNT :01
BACK SELECT > ANSWER

0123456789
LINE XXX 00:00:03
TRANS CONF MUTE .

Press [ANSWER] to call the displayed number.

3.2 DEL CUR

0123456789
03/10 16:02 CNT :01
BACK SELECT > DEL CUR

STATION 700 (T)
FEB 01 04 05:34 pm
PICKUP CONF REDIAL

Press [DEL CUR] to erase current number.

NOTE

BACK Return to the previous

Call Log

3.3 DEL ALL

0123456789
14/07 16:02 CNT :01
BACK SELECT > DEL ALL

Press [SELECT] until [DEL ALL] appears in display.
Press [DEL ALL] to initiate 'delete all' function.

ALL CLI DELETE
Press HOLD Key
BACK SELECT > DEL ALL


Press the [HoldSave] button to confirm 'delete all' function. All numbers are erased.

3.4 SAVE

0123456789
03/10 16:02 CNT :01
BACK SELECT > SAVE

To save CLI, press [SAVE] button.

ENTER SPD BIN NO (000)
CLI MSG USED
PAUSE FLASH D-TONE

Press [Hold/Save] or  button, the speed dial is registered.

. See the page 42.

3.5 NAME/TEL

0123456789
03/10 16:02 CNT :01
BACK SELECT > NAME/TEL

To check the name of the selected number, press the [NAME/TEL] button.

EDWARD
03/10 16:02 CNT :01
BACK SELECT > NAME/TEL

OR if a name is displayed, to check the associated number, press the [NAME/TEL] button.

NOTE

BACK Return to the previous screen

Menu



1 BASIC PROGRAM
2. ADVANCED PROGRAM
OK

Press the [Menu] button.



1. BASIC PROGRAM
2 ADVANCED PROGRAM
OK

Press the [Navigation] button.



3 SPEED PROGRAM
4. MOBILE EXTENSION PGM
OK

Press the [Navigation] button.



3. SPEED PROGRAM
4 MOBILE EXTENSION PGM
OK

Press the [Navigation] button.



5 CONFERENCE ROOM PGM
6. HOT DESK PROGRAM
OK

Press the [Navigation] button.



5. CONFERENCE ROOM PGM
6 HOT DESK PROGRAM
OK

Press the [Navigation] button.

NOTE

BACK Return to the previous screen


CONFERENCE ROOM is not available in IPLDK-20.

Menu

1. BASIC PROGRAM





Press the [MENU] button.

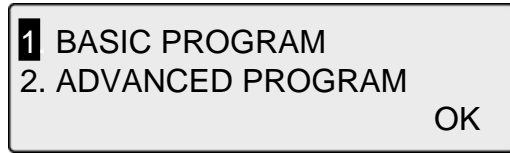

Press [OK] or  button.

1.1 STATION NAME PROGRAM

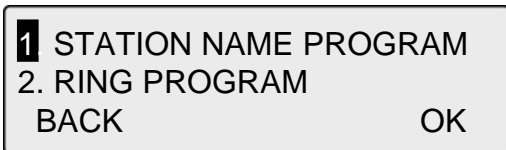

Press [OK] or  button.





Enter the name.

. For detailed information about entering name, see the page 49.

Menu



1.2 RING PROGRAM

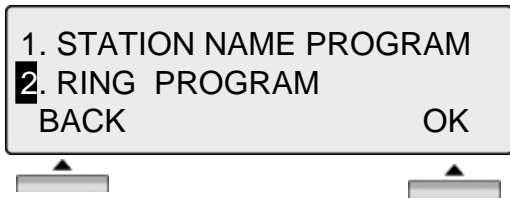

Press [OK] or  button.




Press [Navigation] button.

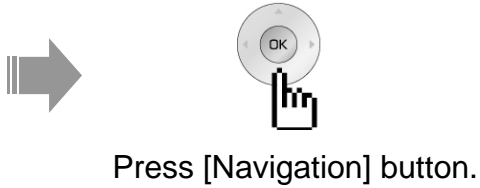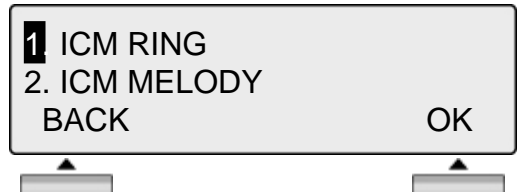

Press [Navigation] button.



Press [Navigation] button.

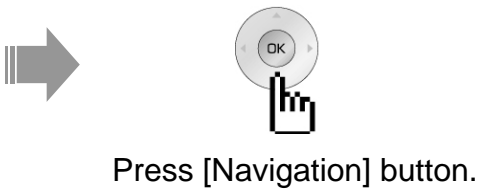


Press [Navigation] button.




Menu


1.2.1 Select Ring




Press [OK] or  button.

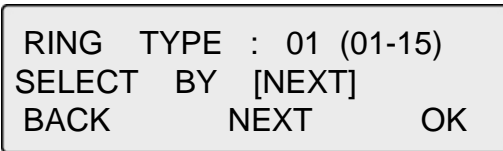

Step using [NEXT] or  button to select the ring.

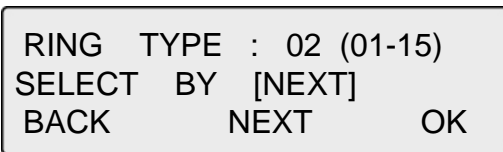


Press [OK] or  button. The selected ring type is saved.


. Use same procedure to select CO Ring type.


1.2.2 Select Melody





Press [OK] or  button.

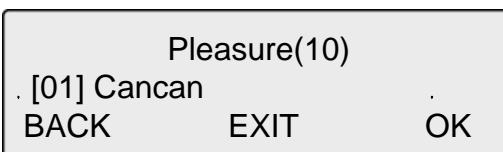

Use [OK] or  button to select the category.
. Press the [EXIT] button to cancel.




Use [OK] or  button to select the desired melody.
Press [OK] or  button and then the melody is changed.


. Use same procedure to select CO Melody.


Note : To set the melody, MFU and MU board is required.


Menu

1.3 MODE(H/T/P) PROGRAM

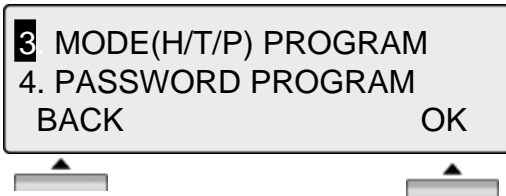


Press the [OK] or  button.

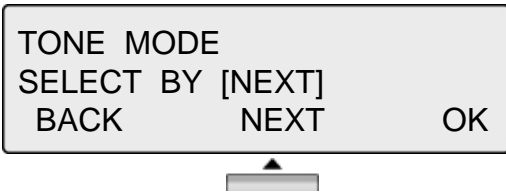


Press [NEXT] or  button to select the mode.

- . There are three types as follows;
- . HANDSFREE MODE
 - . TONE MODE
 - . PRIVATE MODE

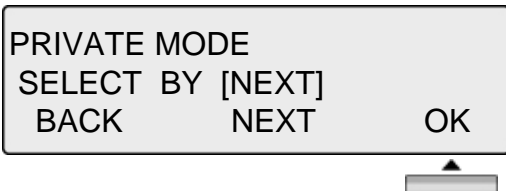

Press [OK] or  button.

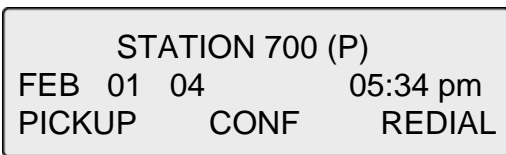

The selected mode is saved.

NOTE

PRIVATE You will hear three bursts of tone and an announcement. Reply hands-free or lift handset for privacy. The calling party can hear any conversation in progress.



HANDSFREE You will hear repeated bursts of intercom ring tone and the Hold/Save button flashes slowly. Lift the handset or press the SPEAKER button to answer.


TONE You will hear three bursts of tone and one-way announcement. The calling party cannot hear any conversation in progress

Menu

1.4 PASSWORD PROGRAM



3. MODE(H/T/P) PROGRAM
4. PASSWORD PROGRAM
BACK OK





Press [OK] or  button.

1.4.1 PASSWORD REGISTER

> PASSWORD REGISTER
SELECT BY [NEXT]
BACK NEXT OK




Use [Next] or  button to select the password register.


Then press [OK] or  button.

ENTER PASSWORD :
BACK

Enter password. (5 digits)
e.g.) 55555

PRESS OK KEY
BACK OK






Press [OK] or  button.


Menu

1.4.2 PASSWORD CHANGE

> PASSWORD CHANGE
SELECT BY [NEXT]
BACK NEXT OK



Use [Next] or  button to select the password change.

Then press [OK] or  button.


ENTER CURRENT PASSWORD
BACK


Enter the current password. (5 digits)
e.g.) 55555

ENTER PASSWORD :
BACK

Enter the new password. (5 digits)
e.g.) 33333


PRESS OK KEY
BACK OK




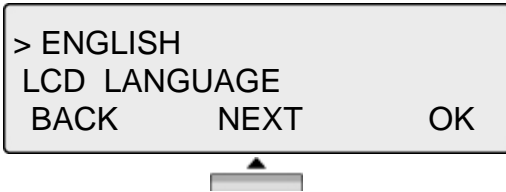
Press [OK] or  button.

Menu


1.5 LANGUAGE PROGRAM

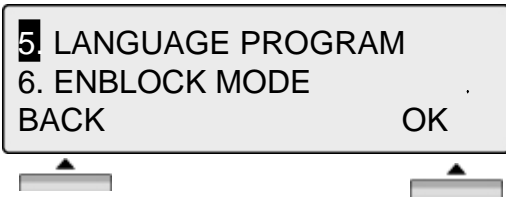


Press [OK] or  button.





Use [NEXT] or  button to select language.

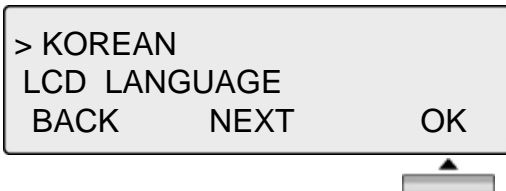


Press [OK] or  button.


1.6 ENBLOCK MODE PROGRAM

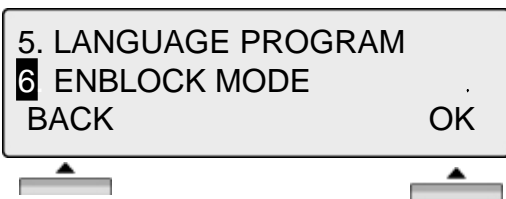


Press [OK] or  button.

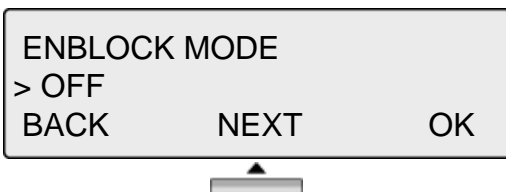

Use [NEXT] or  button to select ON/OFF.

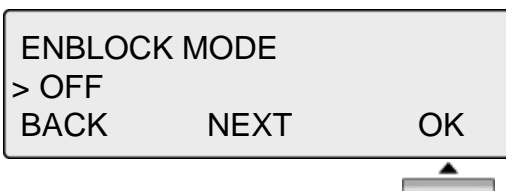

Press [OK] or  button.

Note: A New Zealand initialised system may not allow this setting to be changed. (Enbloc not supported.)

Menu

2. ADVANCED PROGRAM




Press [MENU] button.



Press  button.

2.1 WAKE UP PROGRAM


2.1.1 Setting

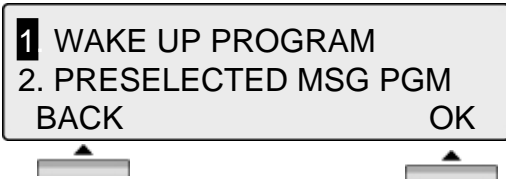


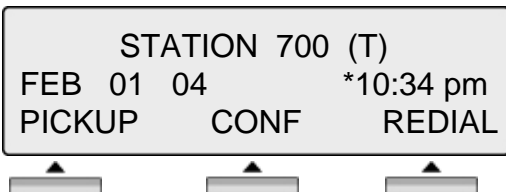
Press  button.




Enter the time and select single time or every day.
-S:Single (once only - Default)
-C:Every Day (#)
* Set the time : 24 hr format
• e.g. :7am = 07:00
:7pm = 19:00

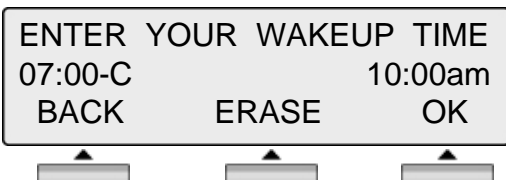

Press [OK] or  button.




Flashing [*] preceding time indicates alarm set.

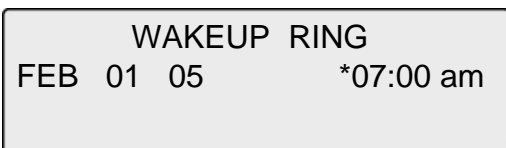


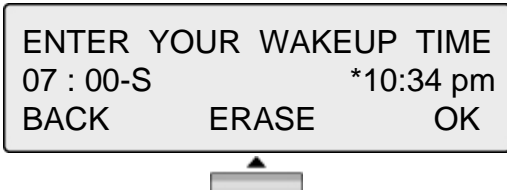
The alarm will sound at the pre-set time.

Menu


2.1.2 Canceling

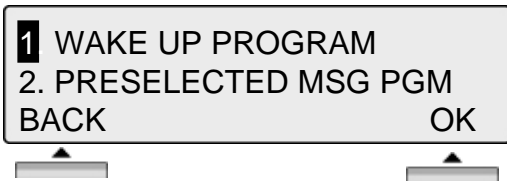


Press [OK] or  button.



Press [ERASE] button.

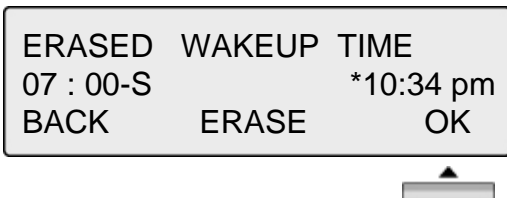



Press [OK] or  button.


Menu

2.2 PRESELECTED MSG PGM

2.2.1 Select the MSG PGM



1. WAKE UP PROGRAM
2 PRESELECTED MSG PGM
BACK OK





Press [OK] or  button.


SELECT BY UP/DOWN KEY
BACK




Use  or  button to select the desired type.

OUT OF OFFICE
RETURN AT TIME XX:XX
BACK OK



Press [OK] or  button.


ENTER TIME
HH:MM
BACK



Enter the time (24 hr format)
e.g.) 07:30 am → enter 0730.
07:30 pm → enter 1930.

ENTER TIME
07:30 PRESS OK KEY
BACK P.DVU OK



Press [OK] or  button.


OUT OF OFFICE
RETURN AT TIME 07:30
PICKUP CONF REDIAL



The selected message is displayed.

Menu


2.3 STATION COS PROGRAM

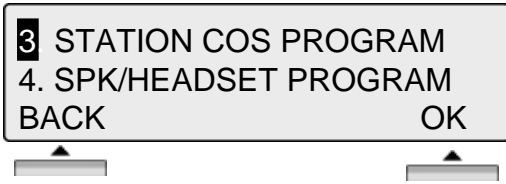



Press [OK] or  button.

. To activate STA COS (Station Class Of Service), password is required..

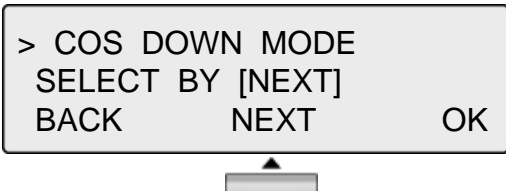2.3.1 COS DOWN MODE





Use [NEXT] or  button to select the COS DOWN MODE.

Press [OK] or  button.

. There are three types as follows;

- . COS DOWN MODE
- . RESTORE COS MODE
- . WALKING COS MODE

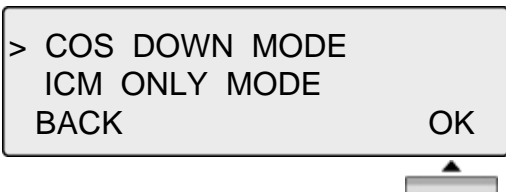



Press [OK] or  button and then the mode is changed.


Menu

2.3.3 WALKING COS MODE


> WALKING COS MODE
SELECT BY [NEXT]
BACK NEXT OK



Use [NEXT] or  button to select WALKING COS MODE.


Press [OK] or  button.


ENTER COS OVERRIDE CODE
BACK



Enter the COS Override code
(Password - 5 digits)
e.g.- 12345


ENTER COS OVERRIDE CODE
PRESS OK KEY
BACK OK




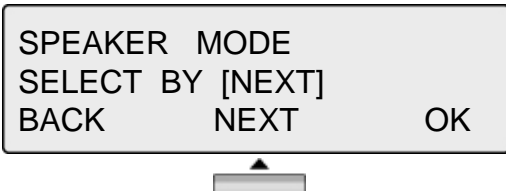
Press [OK] or  button.

Menu

2.4 SPK/HEADSET PROGRAM

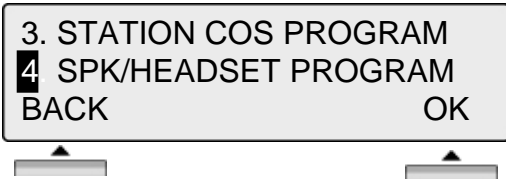



Press [OK] or  button.




Use [NEXT] or  button to toggle the mode.


There are two types as follows;
-. SPEAKER MODE
-. HEADSET MODE

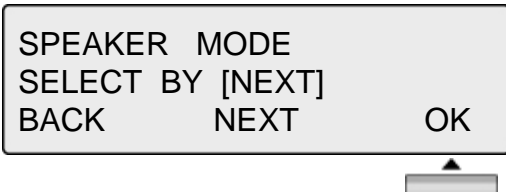


Press [OK] or  button to save selected mode.


2.5 EAR MIC PROGRAM

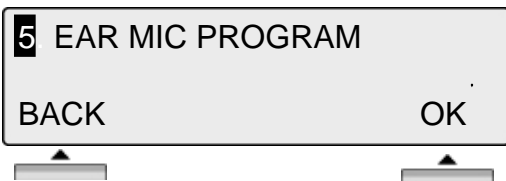


Press [OK] or  button.

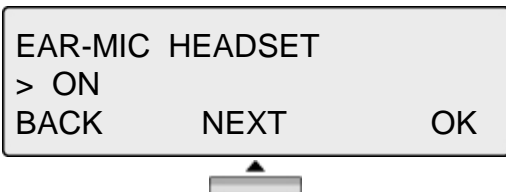

Use [NEXT] or  button to select ON/OFF.

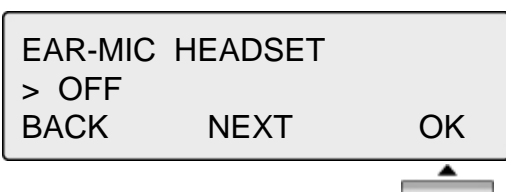

Press [OK] or  button.

Menu


3. SPEED PROGRAM



Press [MENU] button.



3 SPEED PROGRAM
4. MOBILE EXTENSION PGM
OK

Press [OK] or  button.

ENTER SPD BIN NO(000)
BACK


Enter the speed bin number.
e.g.) 007

>
ENTER CO-BTN/DIGIT (007)
BACK DELETE

Enter the phone number.
e.g.) 123456789

Press [DELETE] button
to delete speed bin number.


>123456789
SPEED 007
BACK OK

Then press [OK] or  button.

>
ENTER NAME (SPD 007)
BACK OK

Enter the name.
. See page 49 for details.

> ABC
ENTER NAME (SPD 007)
BACK OK

Then press [OK] or  button.

Menu

4. MOBILE EXTENSION PGM



Press [MENU] button.



3. SPEED PROGRAM
4 MOBILE EXTENSION PGM
OK

Press [OK] or  button.

Refer to IP LDK system & LDK system programming manual.

4.1 MOBILE-EXT. NUM PGM

1. MOBILE-EXT. NUM PGM
2. MOBILE-EXT. ENABLE
BACK OK

Press [OK] or  button.

> 123456789
MOBILE EXT TEL NO.
BACK OK

Enter the mobile number.
e.g.) 2222222

> 2222222
MOBILE EXT TEL NO.
BACK OK


Press [OK] or  button.

4.2 MOBILE-EXT ENABLE

1. MOBILE-EXT. NUM PGM
2. MOBILE-EXT. ENABLE
BACK OK

Press [OK] or  button.

MOBILE EXT. USAGE
> OFF
BACK NEXT OK

Use [NEXT] or  button to toggle ON/OFF.


MOBILE EXT. USAGE
> ON
BACK NEXT OK

Press [OK] or  button.

Menu

5. CONFERENCE ROOM PGM


CONFERENCE ROOM is not available on the IPLDK-20.

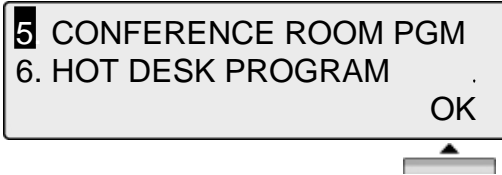


Press [MENU] button.

Press [OK] or  button.


5.1 CREATE CONF ROOM

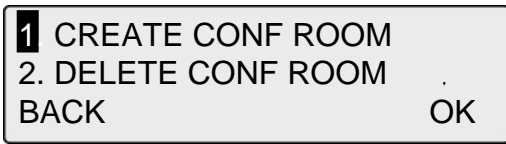

Press [OK] or  button.





Enter conference room number and password.
e.g.) 9 + 12345

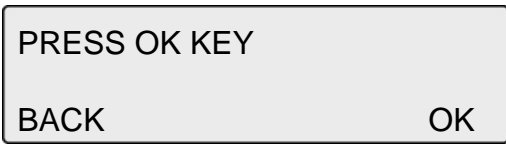

Press [OK] or  button.


5.2 DELETE CONF ROOM

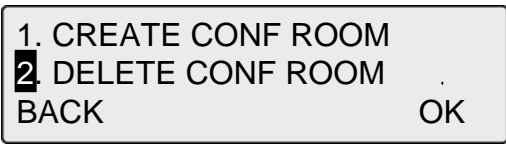

Press [OK] or  button.



Enter conference room number and password.
e.g.) 9 + 12345

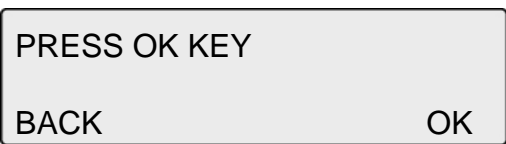

Press [OK] or  button.

Menu

6. HOT DESK PROGRAM



Press [MENU] button.



5. CONFERENCE ROOM PGM
6 HOT DESK PROGRAM

OK

Press [OK] or  button.

. Refer to IP LDK system programming manual.

6.1 HOT DESK LOG IN

1 HOT DESK LOG IN
2. HOT DESK LOG OUT
BACK

OK

Press [OK] or  button.


DUMMY STATION 700
ENTER PASSWORD :


Enter password.(5 digits)
e.g.) 55555


STATION 817 (T)
06 SEP 04 04:00pm
PICKUP CONF REDIAL




Menu

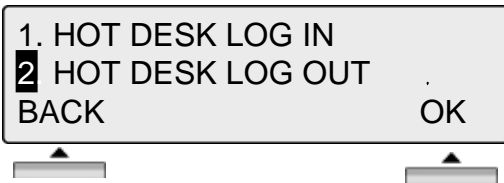6.2 HOT DESK LOG OUT

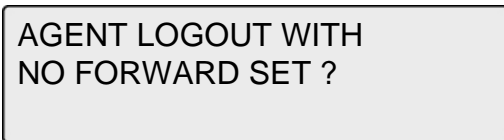


Press [OK] or  button.



Use  button or  button to select forward type and then Press [OK] or  button.

- . Forward type
 - NO FORWARD SET
 - FORWARD TO VMIB
 - FORWARD TO NM...
 - FORWARD TO SPD000
 - FORWARD TO MOBILE-EXT
 - FORWARD TO STA...

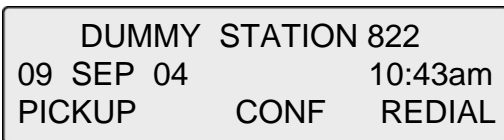


Phone Book




[PHONE BOOK] and [DIAL: BY NAME] are the same feature.



1. DIAL BY ICM NAME
2. DIAL BY STA SPD NAME
OK




3. DIAL BY SYS SPD NAME
OK



1. Dial By ICM Name

1 DIAL BY ICM NAME
2. DIAL BY STA SPD NAME
OK







Press [OK] or





button.

1 CCC (705)
2:DDD (707)
BACK SEND



Use the  button or  button to select the desired number and press the [SEND] button to call.

CALL TO CCC
06 SEP 04 04:06pm
MSG FLASH



Talk.


NOTE

BACK Return to the previous screen

Phone Book



2. Dial By STA SPD Name

1. DIAL BY ICM NAME
2 DIAL BY STA SPD NAME
OK

Press [OK] or  button.

1:ABC(001)
2:DEF(002)
BACK NAME/TEL SEND

To check the number of the selected name, press the [NAME/TEL] button.


Use the  button or  button to select the desired number and press [SEND] button to call.

123456789
LINE 008 00:00:03
TRANS CONF MUTE .

Talk.



3. Dial By SYS SPD Name

3 DIAL BY SYS SPD NAME
OK

Press [OK] or  button.

1. TEAM1(2000)
2. TEAM2(2001)
BACK NAME/TEL SEND

To check the number of the selected name, press the [NAME/TEL] button.

Use the  button or  button to select the desired number and press [SEND] button to call.

123456789
LINE 008 00:00:03
TRANS CONF MUTE .

Talk.

NOTE

BACK Return to the previous screen

Entering characters

A	<input type="text" value="ABC 2"/> + <input type="text" value="1"/>	N	<input type="text" value="MNO 6"/> + <input type="text" value="ABC 2"/>
B	<input type="text" value="ABC 2"/> + <input type="text" value="ABC 2"/>	O	<input type="text" value="MNO 6"/> + <input type="text" value="DEF 3"/>
C	<input type="text" value="ABC 2"/> + <input type="text" value="DEF 3"/>	P	<input type="text" value="PQRS 7"/> + <input type="text" value="1"/>
D	<input type="text" value="DEF 3"/> + <input type="text" value="1"/>	Q	<input type="text" value="PQRS 7"/> + <input type="text" value="ABC 2"/>
E	<input type="text" value="DEF 3"/> + <input type="text" value="ABC 2"/>	R	<input type="text" value="PQRS 7"/> + <input type="text" value="DEF 3"/>
F	<input type="text" value="DEF 3"/> + <input type="text" value="DEF 3"/>	S	<input type="text" value="PQRS 7"/> + <input type="text" value="GHI 4"/>
G	<input type="text" value="GHI 4"/> + <input type="text" value="1"/>	T	<input type="text" value="TUV 8"/> + <input type="text" value="1"/>
H	<input type="text" value="GHI 4"/> + <input type="text" value="ABC 2"/>	U	<input type="text" value="TUV 8"/> + <input type="text" value="ABC 2"/>
I	<input type="text" value="GHI 4"/> + <input type="text" value="DEF 3"/>	V	<input type="text" value="TUV 8"/> + <input type="text" value="DEF 3"/>
J	<input type="text" value="JKL 5"/> + <input type="text" value="1"/>	W	<input type="text" value="WXYZ 9"/> + <input type="text" value="1"/>
K	<input type="text" value="JKL 5"/> + <input type="text" value="ABC 2"/>	X	<input type="text" value="WXYZ 9"/> + <input type="text" value="ABC 2"/>
L	<input type="text" value="JKL 5"/> + <input type="text" value="DEF 3"/>	Y	<input type="text" value="WXYZ 9"/> + <input type="text" value="DEF 3"/>
M	<input type="text" value="MNO 6"/> + <input type="text" value="1"/>	Z	<input type="text" value="WXYZ 9"/> + <input type="text" value="GHI 4"/>

Glossary of Terms

- 1 **ICM** Intercom – describes internal calls within the telephone system
- 2 **CO Line** Central Office Line – also known as a trunk line, exchange line or outside line
- 3 **Speed Dial** A commonly used number stored in a speed bin for easy access
- 4 **DND** Do Not Disturb – the station is blocked to all incoming calls
- 5 **FWD** Forward – calls can be sent to another location such a voicemail or another station
- 6 **DDI or DID** Direct Dial Inwards or Direct Inwards Dialling – ISDN lines can be provided with multiple telephone numbers which are each routed to individual stations or Hunt Groups
- 7 **DKTU** Digital Key Telephone Unit – an LG digital telephone
- 8 **SLT** Single Line Telephone – an analogue telephone
- 9 **ISDN** Integrated **S**ervices **D**igital **N**etwork. Digital CO lines that come in multiples of 2 channels or more
- 10 **VMIB** Voice Message Interface Board – LG's integral Voice Processing card
- 11 **CONF** Conference – where you can talk to 2 or more internal or external parties