

LDP-7000 Series User Guide (New Zealand)

LDP-7008D



LDP-7004D




About this User Guide:

This User guide is intended to familiarize a user with the LDP-7004D and 7008D Keypad. For a more detailed description of the Keypads capabilities, please refer to the System User Guide. (Available at www.lgaria.co.nz, through the Downloads section – User Guides)

Input/Output Devices and Button

LDP-7008D

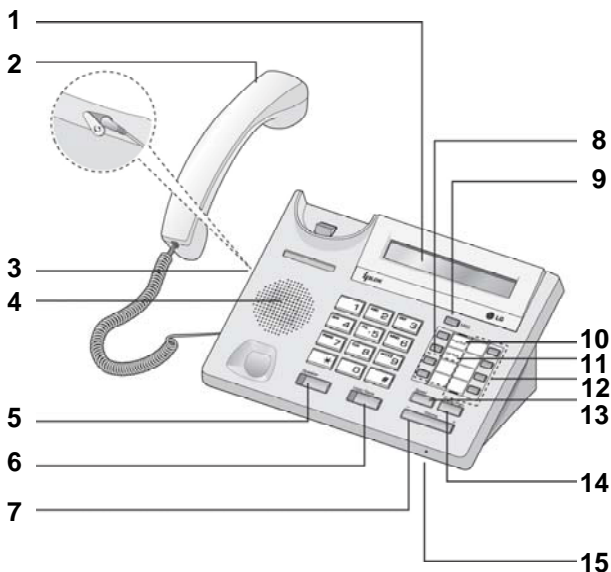

- 1 LCD Display
- 2 Handset
- 3 Headphone Socket (Ear/Mic Mode)
- 4 Speaker
- 5 Speaker Button
- 6 Hold/Save Button
- 7 Volume Button
- 8 Loop Button
- 9 Message Waiting LED
- 10 Dnd/Fwd Button
- 11 Call Back Button
- 12 Flexible Button
- 13 Speed Button
- 14 Trans/Pgm Button
- 15 Handsfree Microphone

Input/Output Devices and Button

LDP-7004D



- 1 LCD Display (LDP-7004D only)
- 2 Handset
- 3 Speaker
- 4 OHD Button
- 5 Hold/Save Button
- 6 Message Waiting LED
- 7 Trans/Pgm Button
- 8 Speed Button
- 9 Flexible Button(Loop Button)
- 10 Volume Button


Input/Output Devices and Button

Item	Description
Handset	Used for handset call.
Earphone-Jack	Provides a connection to an optional earphone for hands-free phone conversation.
Speaker	Outputs tones and voice.
Speed Button	Used to access speed dialing, speed dial programming and saved number redial.
Dnd/Fwd Button	The DND (Do Not Disturb) feature blocks all incoming calls. When DND is active, the red LED in this button is illuminated. It is also used to activate call forward, e.g. to another station or voicemail. When call forward is activated, the red LED flashes.
Hold/Save Button	This button puts a call on hold or saves information when programming.
Speaker Button	Speaker toggles the speakerphone state, and the red LED is illuminated when the speakerphone is active.
OHD Button	On Hook Dial allows 7004D users to dial and monitor a call without lifting the handset.

Input/Output Devices and Button

Item	Description
LCD Display	Shows dialled and incoming numbers (where applicable) and on the 7008D it will display other information about call status, dialing directories and message information.
Trans/PGM Button	This button is used to initiate a call transfer (Trans) or to enter programming mode (Pgm).
Flexible Button	The last two (7004D) or six (7008D) flex buttons can be assigned outside line presentation or as one-touch feature access. (See codes at rear of guide)
Call back Button	A station can initiate a call-back request to a busy station. Once that station becomes idle, the initiating station is signalled.
Volume Button	The volume button adjusts the audio levels for ringing, handset and speakerphone or OHD functions .
Handsfree Microphone	Microphone for hands-free speakerphone function.
Loop Button	Loop Button(s) are required for presentation of outside lines to the telephone. At least one is required per telephone.

Cable Connection

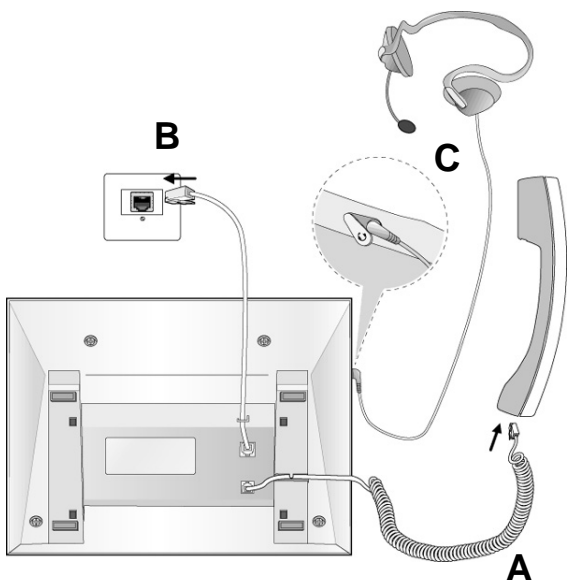

Cable connection

- A** Connect the telephone cord (curly cord) to the handset and the other end to the handset jack on the bottom of the telephone.
- B** Connect the line cable to the port on the bottom of telephone and the other end to the wall socket.
- C** Connect the Headphone to the headphone jack on the left side of the telephone.
(As viewed from the front.)

Note: 7004D does not support integral headphone mode.

Basic Function

Placing an Outside Call

- . Lift handset, press OHD/Speaker or dial from the keypad.
- . Dial **1**.
- . Dial the desired number.

Placing an Intercom Call

- . Lift handset, press OHD/Speaker or dial from the keypad.
- . Dial the station number.

Placing an Outside Call on Hold

- . While connected to an external call, press [HOLD] button.

Retrieving a Outside Call on Hold

- . Press the flashing flexible button.
- . **Note:** calls will automatically recall after pre-defined time

Re-directing an Incoming Call (Call Pick-up)

When you hear another phone ringing in your area,

- . Lift handset, press OHD/Speaker or dial from live keypad.
- . Dial * **4 2**.
- . Dial the extension number of the ringing station.
- . You will be connected automatically to the caller.

OR

- . If you have a DSS key programmed for the ringing station, press the DSS key

Answering an Waiting Call

- . Press the flashing CO button.

Basic Function

Call Wait (Camp-on)

- . After receiving station busy tone, dial * .
- . Camp-on tone is heard in the called station.
- . When called party answers, talk or hang up to transfer another call to the called party.

Last Number Redial

- . Lift handset, press OHD/Speaker or dial from active keypad.
- . Dial **5 5 2** or press speed button + dial '*' + Hold/Save button.

Storing Station Speed Dial Numbers

- . Press the [Trans/Pgm] and [Speed] Button.
- . Dial speed bin number. Range (000-199)
- . Dial speed dial number you wish to store.
- . Press the [Hold/Save] button.
- . Enter the name associated to the number.
- . Press the [Hold/Save] button.
- . You will hear confirmation tone.

Using Station Speed Dial Numbers


- . Press the [SPEED] button
- . Dial the desired speed dial bin number.

Group Call Pick-up


- When hearing an unattended phone ringing in your area,
- . Lift handset.
 - . Dial * 1.
 - . You will be connected automatically to the caller.
 - . **Note:** you must be in the same pick-up group.


Code for Flexible Button Programming


Register of Flexible Button

1 **Trans/Pgm**
 Press the [Trans/Pgm] button.

2  Press the [Flexible] button.

3 **Trans/Pgm**
 Press the [Trans/Pgm] button.

4  Enter code number.

5 **Hold/Save**
 Press the [Hold/Save] button.

Code for Flexible Button Programming

Button Assignment for LDP-7004D, 7008D

Function	Code Number
CONF button	TRANS/PGM + 91
CALLBK button	TRANS/PGM + 92
DND/FWD button	TRANS/PGM + 93
FLASH button	TRANS/PGM + 94
MUTE button	TRANS/PGM + 95
MON button	TRANS/PGM + 96
REDIAL button	TRANS/PGM + 97
Ring Type	TRANS/PGM + 11
Enblock mode	TRANS/PGM + 14
Ear-Mic Headset	TRANS/PGM + 17
ICM Ring	TRANS/PGM + 18
CO Ring	TRANS/PGM + 19
COS Down	TRANS/PGM + 21
Walking COS	TRANS/PGM + 23
Auth. Code Register	TRANS/PGM + 31
Auth. Code Change	TRANS/PGM + 32
Set Wake-up Time	TRANS/PGM + 41
Set Pre-selected MSG	TRANS/PGM + 51
Set Customer MSG	TRANS/PGM + 52
Two way Record	TRANS/PGM + 54
Record User Greeting	TRANS/PGM + 61
Listen Time & Date	TRANS/PGM + 62
Listen Station Number	TRANS/PGM + 63
Listen Station Status	TRANS/PGM + 64
Record Page MSG	TRANS/PGM + 65
Erase User Greeting	TRANS/PGM + 66
Erase Page MSG	TRANS/PGM + 67
LCD Display Language	TRANS/PGM + 71
Background Music	TRANS/PGM + 73
Register Station Name	TRANS/PGM + 74
Speakerphone/Headset	TRANS/PGM + 75
Headset Ring Mode	TRANS/PGM + 76
Account Code	TRANS/PGM + 80
DID Call Wait	TRANS/PGM + 81
ICM Hold	TRANS/PGM + 83
LOOP button	TRANS/PGM + 84
Camp-on	TRANS/PGM + 85
Call Log Button	TRANS/PGM + 57
Activate CONF Room	TRANS/PGM + 43
Deactivate CONF Room	TRANS/PGM + 44